
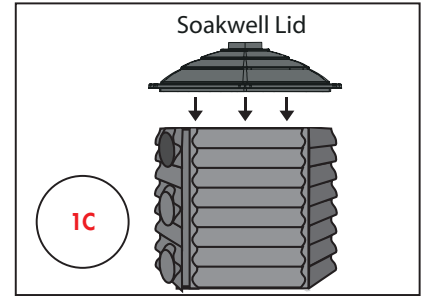



Installation Instructions for Soakwell System

Easy Installation in 3 simple steps

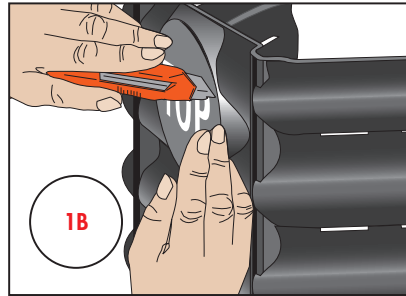


1. ASSEMBLE BASE AND "NEW" SOAKWELL LID

Assemble sides of the Soakwell Base by inserting tabs and pushing lock clips together – both sides "TOP" up. Cut out "TOP" inlet hole. Fit "NEW" Soakwell Lid to the Base.

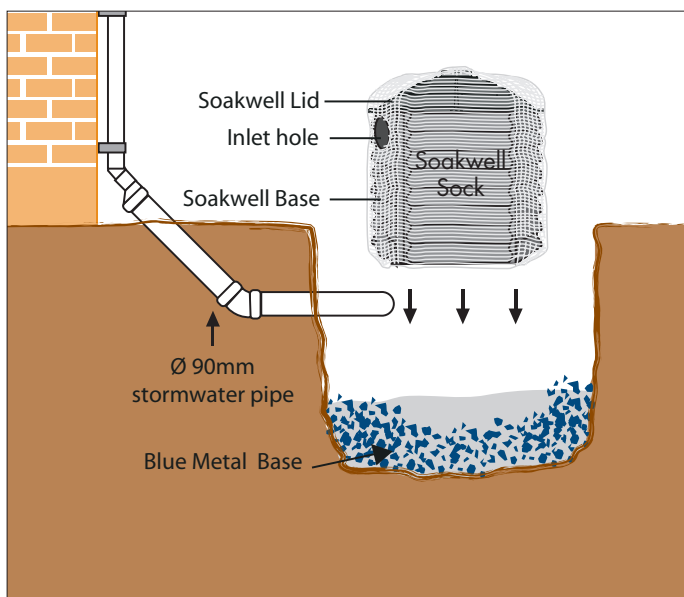

2. FIT SOAKWELL SOCK

Fit Soakwell Sock over the top of assembled Base and Lid. Cut inlet hole in Sock to fit pipe through.

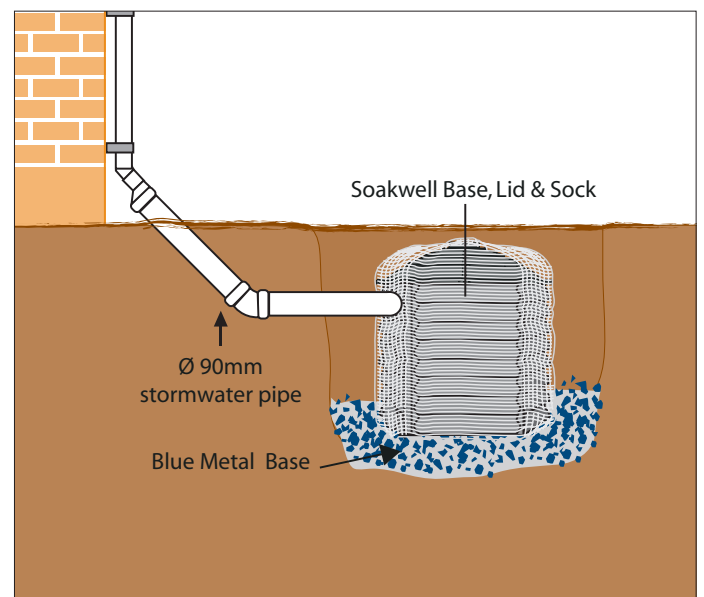

3. INSTALL

Place assembled Soakwell in a one metre hole with a base of 100mm blue metal. Connect to storm water pipe. Backfill hole and cover.

Available at

Leading hardware
and plumbing
suppliers