

RELN SOAK WELL


*Clears unwanted water in
sandy soil fast!*

NEW




- Superstrong corrugated beehive design
- Designed to withstand ground pressure
- Knock out centre or bottom inlet/outlet for controlled flow
- Drainage slots designed to provide maximum water flow to surrounding soil

EASY TO ASSEMBLE AND SIMPLE TO INSTALL:

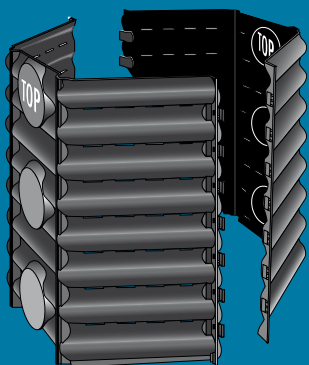


STEP 1. ASSEMBLE.

- Assemble (both sides "TOP" up) by inserting tabs and pushing lock clips together.
- Cut out "TOP" inlet hole.

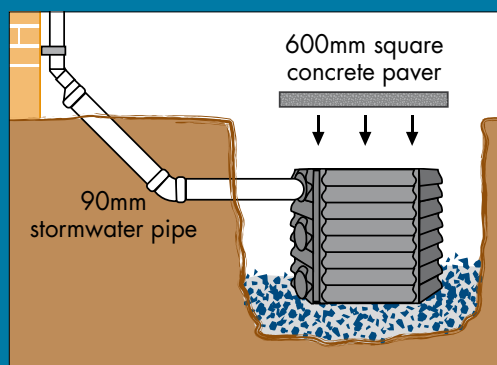

STEP 2. INSTALL.

- Place RELN Soak Well in a one metre hole on a base of 100mm of blue metal.
- Connect to stormwater pipes and surround with RELN Drain Matting 600mm x 6m or alternatively back fill with blue metal.

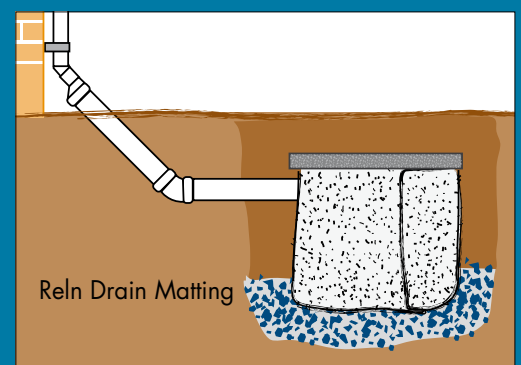

STEP 3. FINISH OFF.

- Cover with a 600mm square concrete paver, smooth side down.
- Back fill and cover.

For further information visit our website: www.reln.com.au
or contact Customer Service on 1300 137 356



50 years of Innovation